



Setting Up Wireless Broadband Modem and Surge Protector

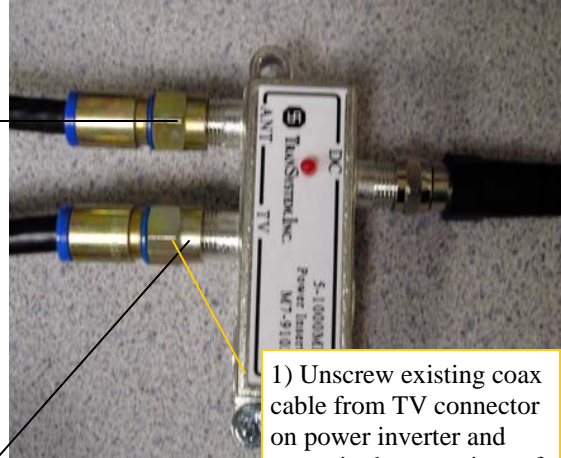

1) Unscrew existing coax cable from TV connector on power inverter and screw in the new piece of coax cable to the TV connector. Leave the ANT connector as it. This is the cable to the wireless dish.

2) Screw the other end of the new coax cable into the TX OUT on the surge protector.

3) Screw the longer piece of coax (that was removed from the TV connector on the power inverter) to the TX IN on the surge protector.

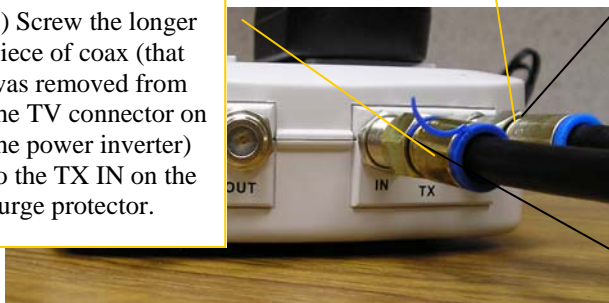

4) The other end of the longer coax cable should be connected to the modem.



Coax Cable




Setting Up Wireless Broadband Modem and Surge Protector (continued)

1) Plug an Ethernet cable into the modem.

2) The other end of the same Ethernet cable should be plugged into the IN port on the surge protector.

3) From the OUT plug on the surge protector, connect an Ethernet cable and connect that to your computer or router.

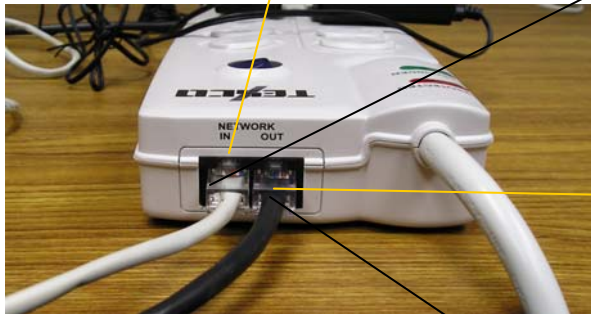

Ethernet Cables

